



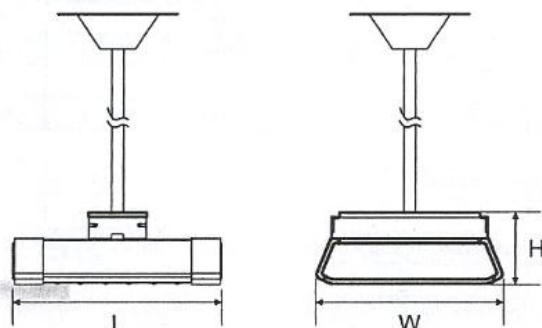


COOL FIN MODULAR HIGH BAY - PENDANT MOUNT INSTALLATION INSTRUCTIONS

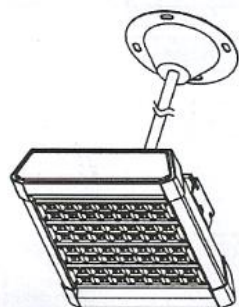

Product Spec in mm	Length	Width	Height
CFHBM30P	208	330	129
CFHBM60P	240	330	129
CFHBM90P	302	330	129
CFHBM120P	364	330	129
CFHBM150P	426	330	129
CFHBM180P	488	330	129
CFHBM210P	550	330	129
CFHBM240P	612	330	129
CFHBM270P	674	330	129
CFHBM300P	736	330	129

Warning: Luminaire can not be directly installed on the surface of ordinary flammable material in any circumstance.

Warning: If outer flexible cable or cord of luminaire are damaged, only manufacturer, its agent or eligible people can replace them to avoid accident.

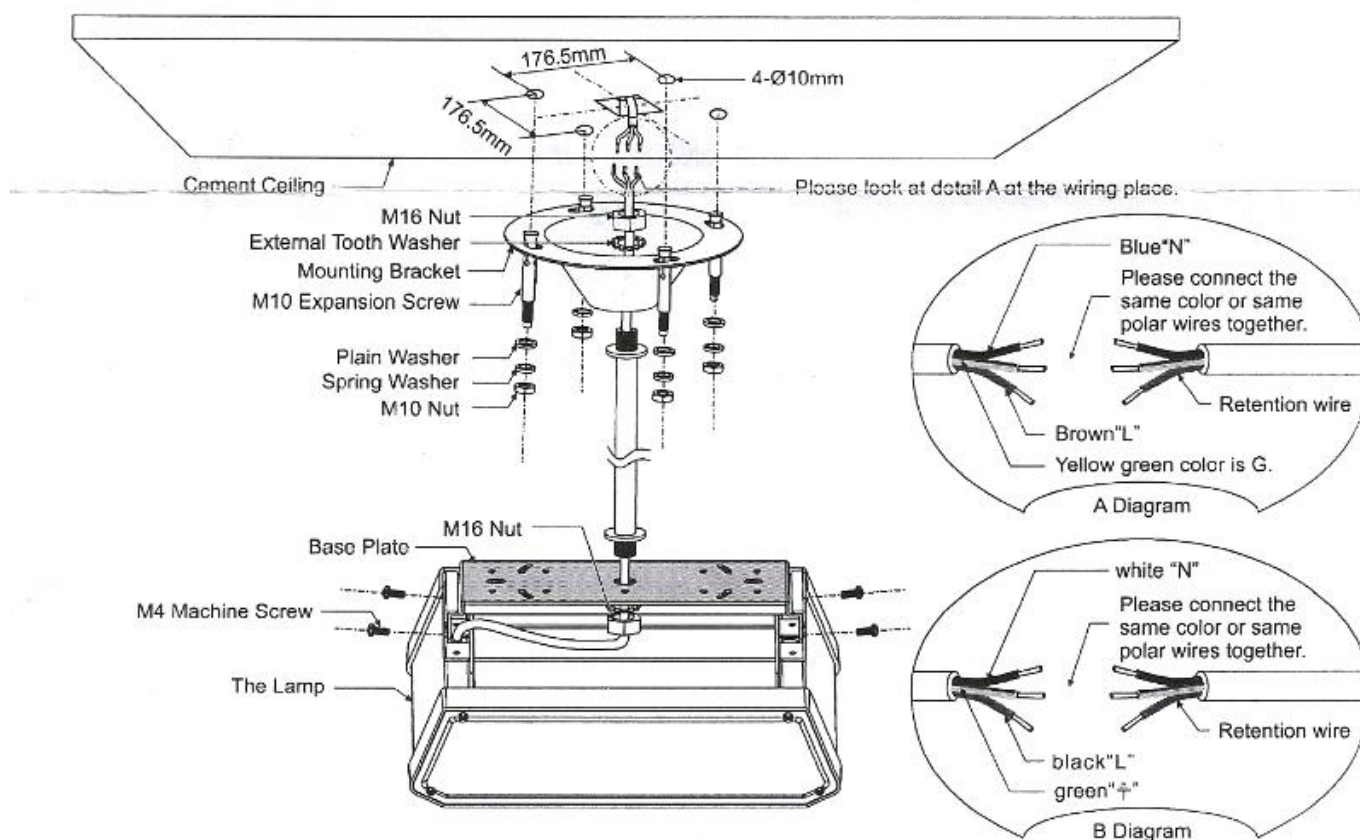

Step one: Drill four holes in the ceiling with electrical drill. Spacing as shown in the picture.

Remark: The length of M10 expansion screw and the depth of the hole should be over 60mm.

Step two: Tap the M10 screws into the holes just as the sketch shows.

Step three: Loosen M4 machine screws and then remove the base plate out.

Step four: connect base plate and ceiling disk with suspender, then use external tooth washer and M16 nut to lock base plate and ceiling disk.

Step five: Pass the power supply wire through base plate, suspender and mounting bracket as the sketch shows.

Step six: Fix base plate onto the lamp body with four M4 machine screws.

Step seven: Connect the lamp power supply wire with retention wire, then make insulation and water-proof processing. Please look at diagram A/B at the wiring place (please connect wires as per appropriate color of power cords as shown in A/B diagram.)

Step eight: Tighten the lamp on the ceiling with plain washer, spring washer and M10 nut.