



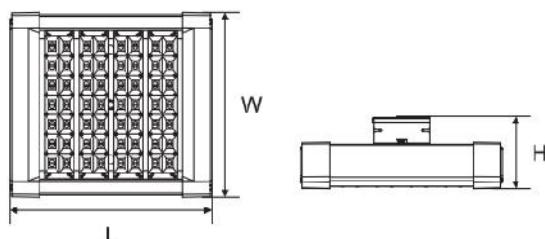




COOL FIN MODULAR HIGH BAY - SURFACE MOUNT INSTALLATION INSTRUCTIONS

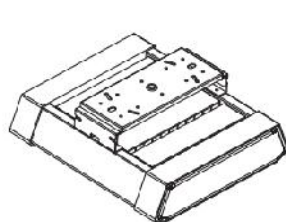

Product Spec in mm	Length	Width	Height
CFHBM30S	208	330	129
CFHBM60S	240	330	129
CFHBM90S	302	330	129
CFHBM120S	364	330	129
CFHBM150S	426	330	129
CFHBM180S	488	330	129
CFHBM210S	550	330	129
CFHBM240S	612	330	129
CFHBM270S	674	330	129
CFHBM300S	736	330	129

Warning: Under any circumstances, the lamp should not be installed on the surface of normal combustible material.

Warning: If the external soft wire is damaged, it should be changed by the manufacturer or its service agency or someone qualified.

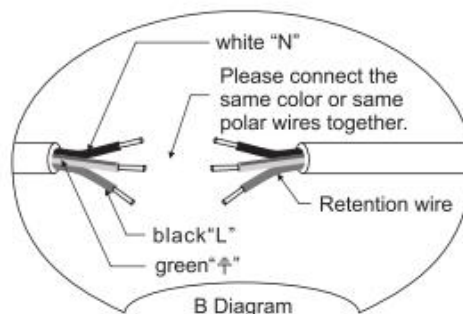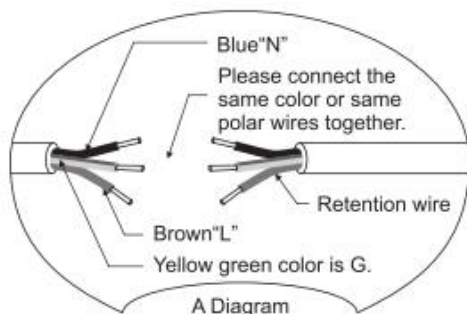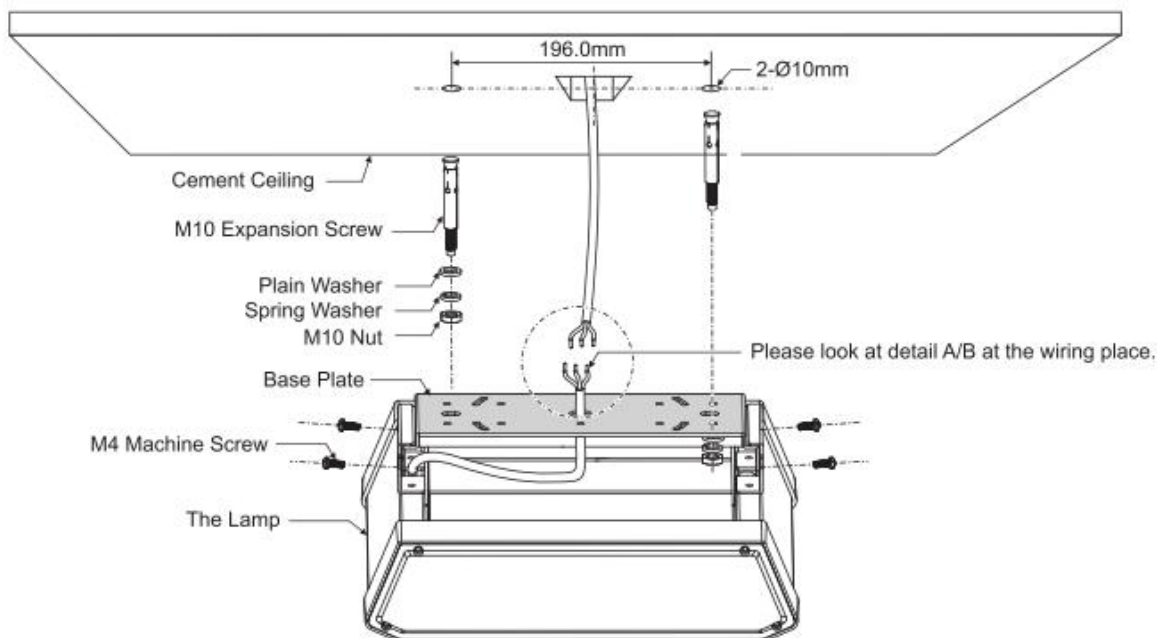

Step one: Drill two holes in the ceiling with electrical drill. Spacing as shown in the sketch.

Remark: The length of M10 expansion screw and the depth of the hole should be over 60mm.

Step two: Tap the M10 screws into the holes just as the sketch shows.

Step three: Loosen M4 machine screws and then remove the base plate out.

Step four: Pass the power supply wire through the hole of base plate as the sketch shows.

Step five: Connect the lamp power supply wire with retention wire, then make insulation and water-proof processing. Please look at detail A/B at the wiring place.

(please connect wires as per appropriate color of power cords as shown in A/B diagram.)

Step six: Then tighten base plate with M10 nut.

Step seven: Lock the lamp on the base plate with four M4 Machine screws.