


COOL FIN MODULAR WALL MOUNT INSTALLATION INSTRUCTIONS

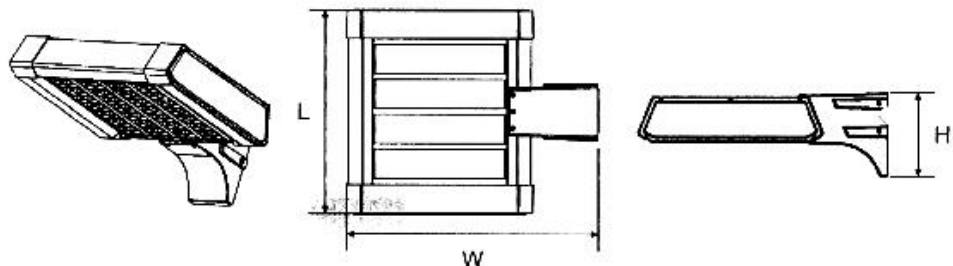


Mounting height $\geq 8m$, the maximum projection area of undergoing wind: $L(m) \times W(m) \times 0.5$

Product Spec in mm	Length	Width	Height
CFFLWM30	208	445	150
CFFLWM60	240	445	150
CFFLWM90	302	445	150
CFFLWM120	364	445	150
CFFLWM150	426	445	150
CFFLWM180	488	445	150
CFFLWM210	550	445	150
CFFLWM240	612	445	150
CFFLWM270	674	445	150
CFFLWM300	736	445	150

Warning: Luminaire can not be directly installed on the surface of ordinary flammable material in any circumstance.

Warning: If outer flexible cable or cord of luminaire are damaged, only manufacturer, its agent or eligible people can replace them to avoid accident.

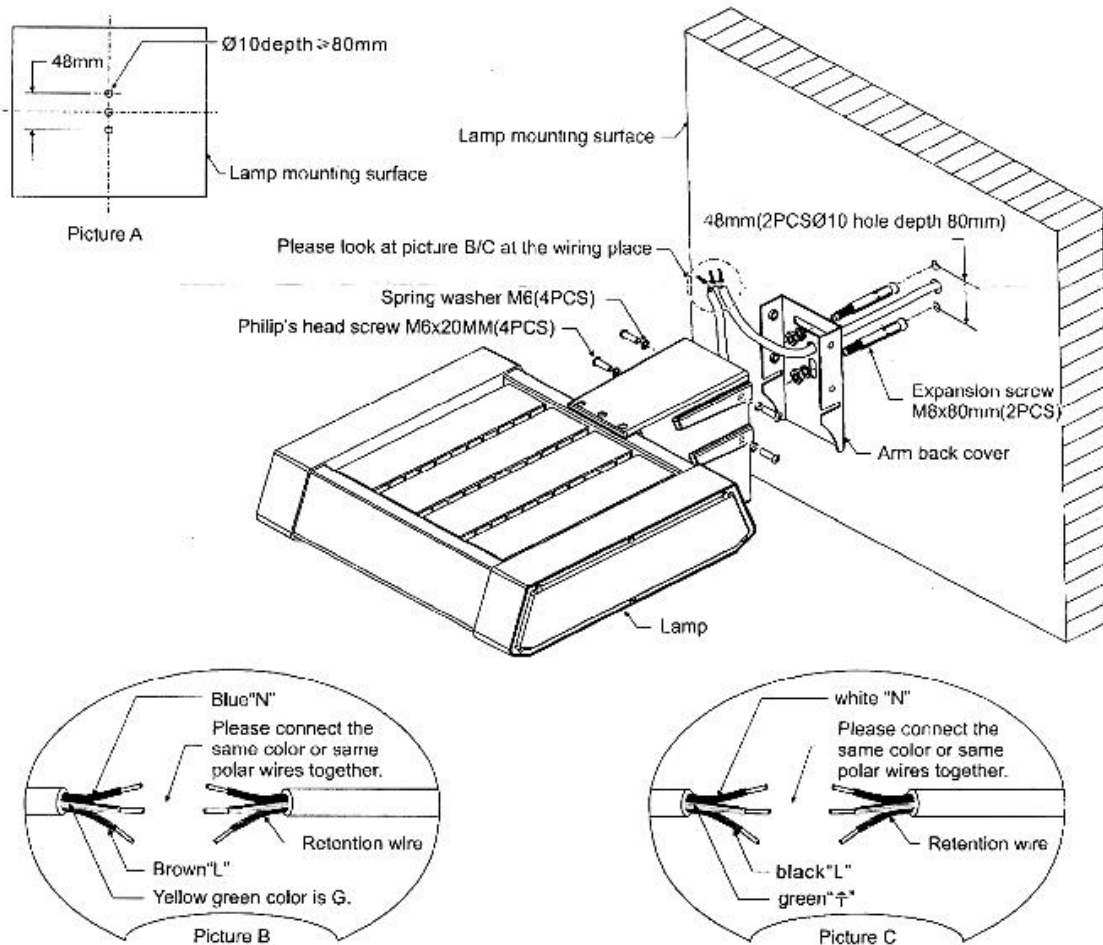

Step1: Drill 2 holes of $\varnothing 8$, depth $\geq 80mm$ on the mounted surface. (Showed in picture A)

Step2: Put 2 pcs M8*80mm expansion screws into the drilled hole.

Step3: Use spring washer and M8 nut to lock the back cover of lamp arm.

Step4: Connect lamp power wire with retention wire and make insulation and waterproof processing. Please look at picture B/C at the wiring place.

Step5: use Philip's head screw M6*20mm (4pcs) to fix the lamp and the back cover of lamp arm.